



<u>Item</u>	<u>Qty</u>	<u>Part Number</u>	<u>Description</u>
	1	221-262-200	Rail Assembly, Front of Load Lock Chamber
Consisting Of:			
1.	1	221-263-200	Rail Weldment
2.	3	221-251-300	Housing and Sprocket Assembly
3.	4	122-142-100	Spacer, Bearing
4.	4	320-144-100	Screw, Socket Head
5.	8	122-296-660	Spacer, Bearing
6.	5	221-290-000	Bearing
7.	4	221-262-500	Shaft
8.	8	122-141-300	Screw, Socket Head
9.	1	176-188-000	Screw, Hex Head
10.	1	221-262-300	Mounting Bar and Shaft
11.	1	221-251-400	Sprocket and Bearing Assembly
12.	1	122-042-000	Retaining Ring
13.	1	221-251-200	Housing and Sprocket Weldment
14.	2	176-174-000	Screw, Socket Head
15.	1	221-261-000	Drive Shaft Adaptor
16.	60"	122-140-900	Chain
17.	1	122-141-000	Link, Connecting
18.	8	221-289-900	Bearing
19.	4	120-110-000	Retaining Ring
20.	9	174-004-000	Washer, Flat
21.	4	175-007-000	Washer, Internal Lock
Kits For Load Lock Chamber Front Rail Assembly:			
	1	31-001003-01	Kit, Load Lock Chamber Rail Rebuild
	1	64-262200-02	Exchange, Load Lock Chamber Front Rail Assy.